


MILLS SIDE TABLE ASSEMBLY INSTRUCTION

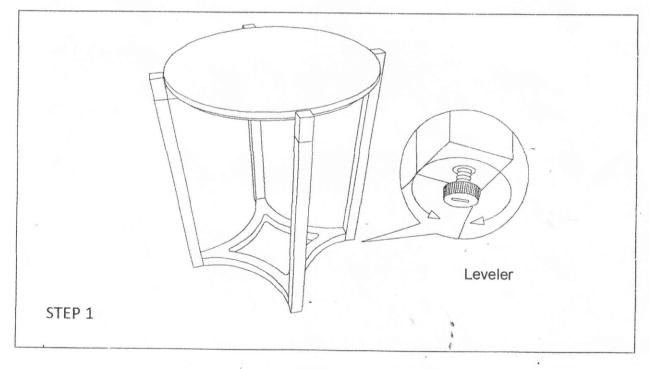



- If the floor is uneven adjust the levelers located at the underside of the Leg, to do this lift Up the side that need to be elevated to provide access to the levelers, turn the leveler until adequate contact with the floor