

LATTICE / OXFORD / PROVANCE / SOMERSET
 SPRING LOUNGE CHAIR ASSEMBLY INSTRUCTIONS

HARDWARE INCLUDED:

- 12 - Stainless Steel Bolts
- 6 - Aluminum Plates
- 24 - Stainless Steel Washers
- 12 - Stainless Steel Lock Washers
- 12 - Stainless Steel Nuts
- 3 - Fiberglass Pads

PARTS INCLUDED:

- 1 Chair Seat
- 1 Chair Base

TOOLS REQUIRED:


- 1 Socket Wrench
- 1 Adjustable Wrench.




STEP 1 : Fiberglass pads are attached to the Chair Base on the Support Bar. Remove the hardware from the end of the Fiberglass Pads and turn the chair over onto a non-abrasive surface.

STEP 2 : Two persons required. Position the chair base over the chair seat and align the pads so that the unattached end points toward the front of the chair.

STEP 3 : Attach the Chair Base to the Chair Seat by way of the Fiberglass Pads as illustrated below in Step 3. Attach the two components using: 2 Nuts, 2 Lock Washers, 2 Washers, 1 Aluminum plate, 2 washers onto 2 bolts and repeat for each of the 3 Fiberglass Pads.

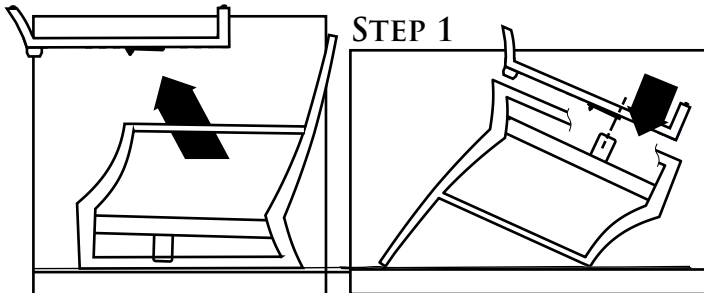


STEP 1

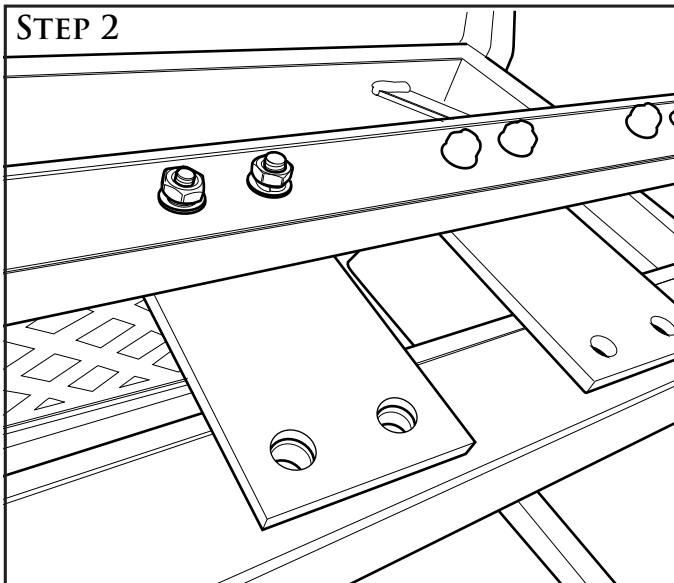

STEP 2

STEP 3

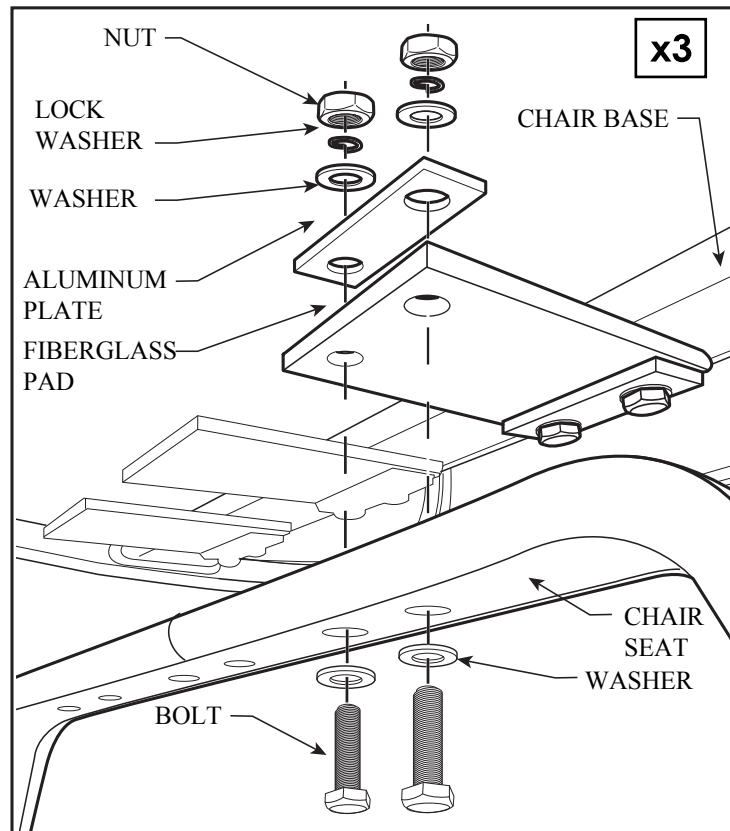

**ROMANCE / VENICE / SAVANNAH
SPRING LOUNGE CHAIR ASSEMBLY INSTRUCTIONS**

Hardware Included:

- 12 - Stainless Steel Bolts
- 6 - Aluminum Plates
- 24 - Stainless Steel Washers
- 12 - Stainless Steel Lock Washers
- 12 - Stainless Steel Nuts
- 3 - Fiberglass Pads



Parts Included:

- 1 Chair Seat
- 1 Chair Base

Tools Required:

- 1 Socket Wrench
- 1 Adjustable Wrench.

Step 1 : Fiberglass pads are attached to the Chair Base on the Support Bar. Remove the hardware from the end of the Fiberglass Pads and turn the chair over onto a non-abrasive surface.

Step 2 : Two persons required. Position the chair base over the chair seat and align the pads so that the unattached end points toward the front of the chair.

Step 3 : Attach the Chair Base to the Chair Seat by way of the Fiberglass Pads as illustrated below in Step 3. Attach the two components using: 2 Nuts, 2 Lock Washers, 2 Washers, 1 Aluminum plate, 2 washers onto 2 bolts and repeat for each of the 3 Fiberglass Pads.

