


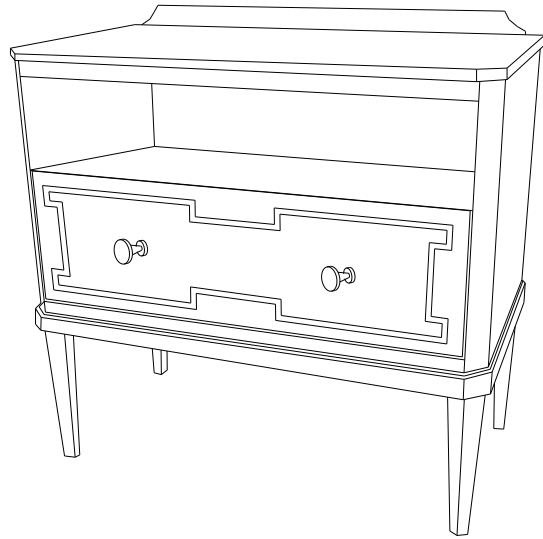

## SCH-168200 GLENWOOD NIGHTSTAND - BLACK ASSEMBLY INSTRUCTION

### HARDWARE INCLUDE :





- A. 3- Bolt
- B. 3- Shim Flat Washer
- C. 1- Anti Tip Kit
  - I. 2 -Small Screw
  - II. 2- Large Screw
  - III. 2-Bracket
  - IV. 1-Retention Belt






### PARTS INCLUDE :

- D-1 – Body
- E-1 – Back Splash
- F-4 – Feet

### HARDWARE :

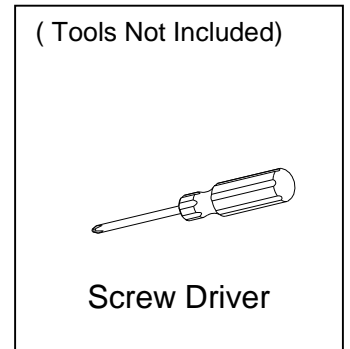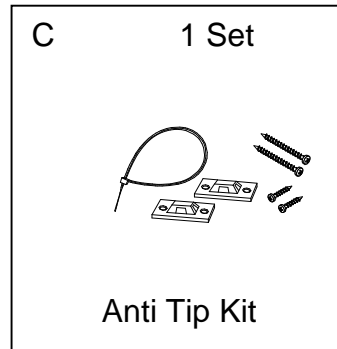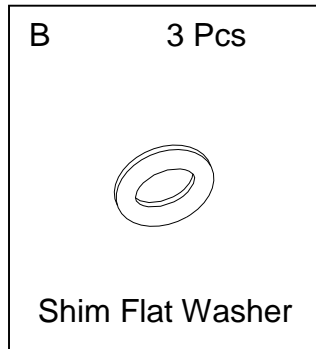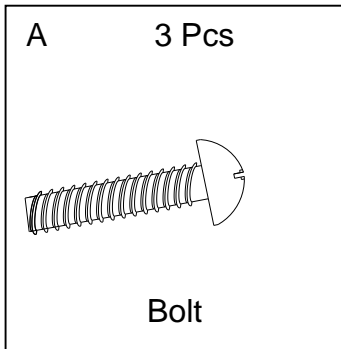


### PARTS :

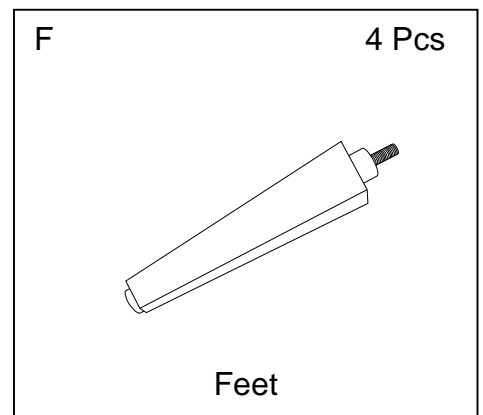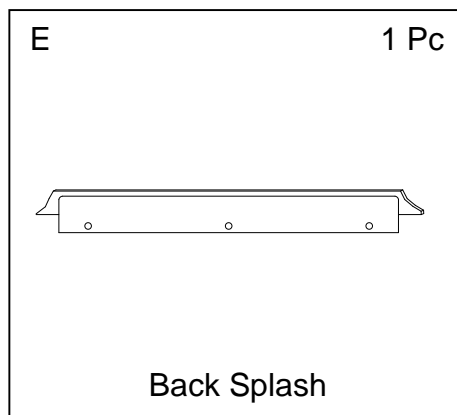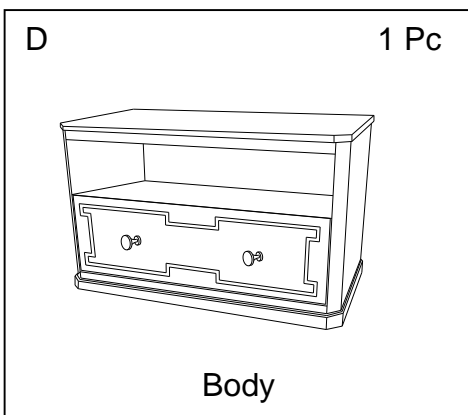




## SCH-168200 GLENWOOD NIGHTSTAND - BLACK ASSEMBLY INSTRUCTION

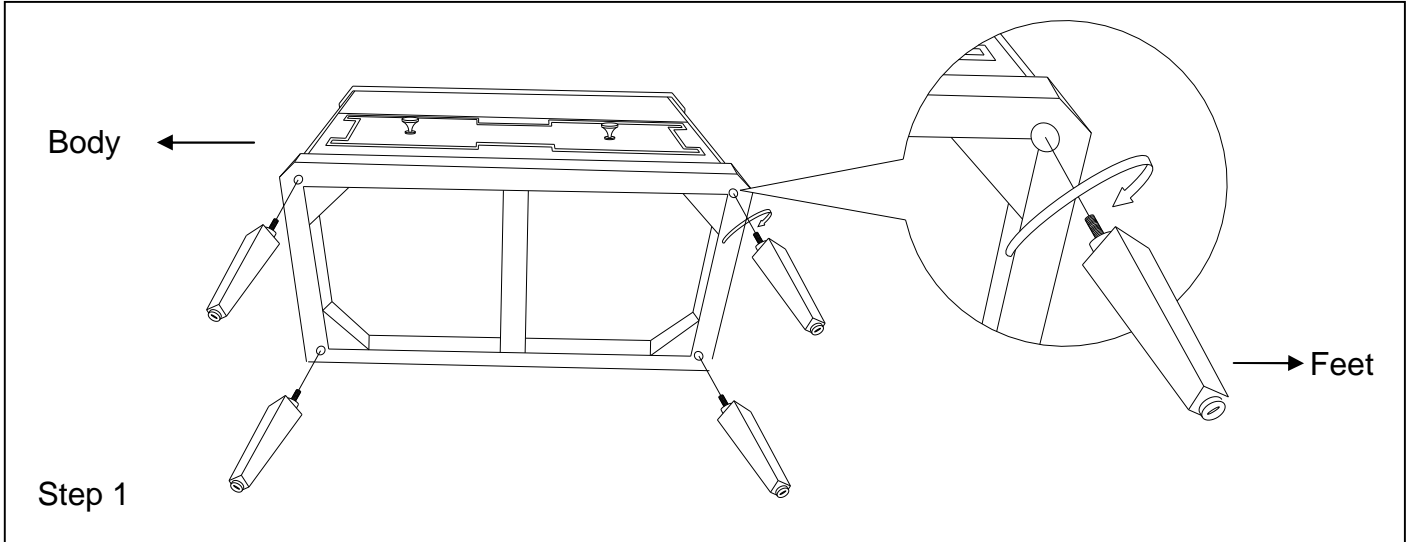

- Place the Nightstand on its back . Insert each Feet (F) into the given female receiving slots and turn the Bun Feet clockwise into place.


### Option 1 – Without Back Splash

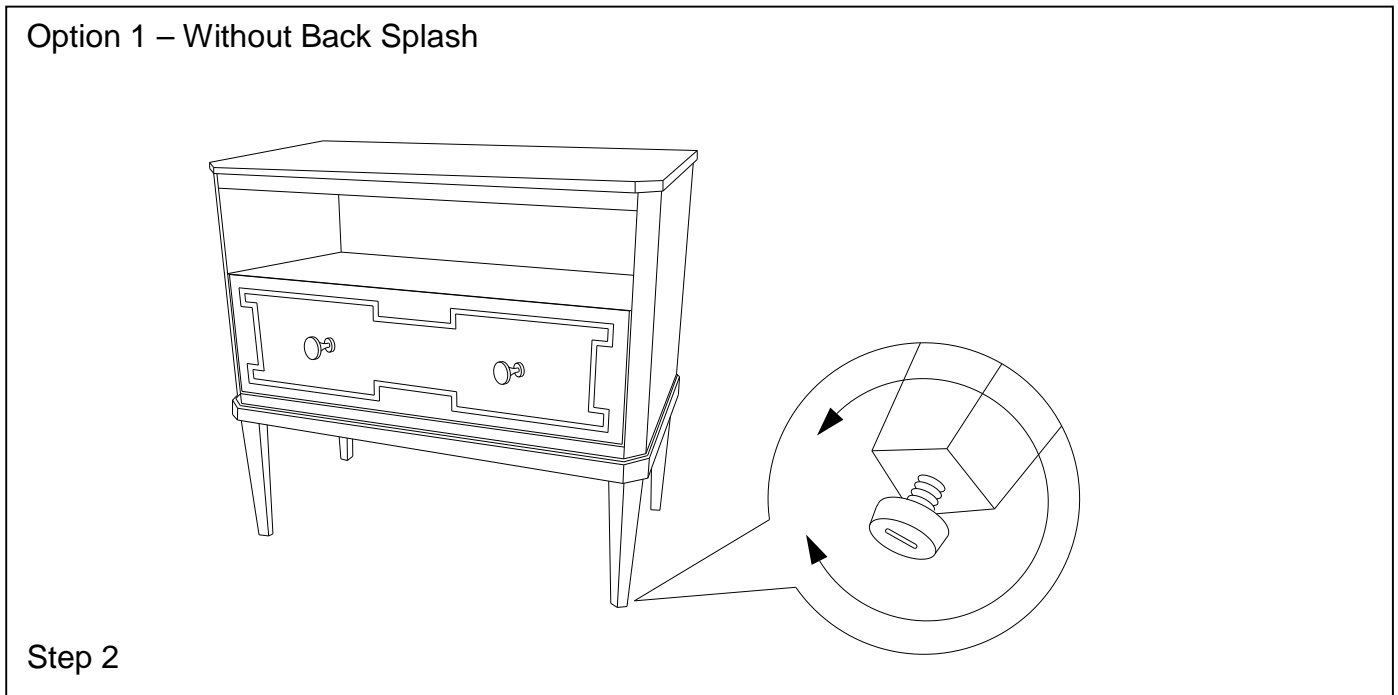

- If the floor is uneven adjust the levelers located at the underside of the Feet, to do this lift Up the side that need to be elevated to provide access to the levelers, turn the leveler until adequate contact with the floor.



## SCH-168200 GLENWOOD NIGHTSTAND - BLACK ASSEMBLY INSTRUCTION

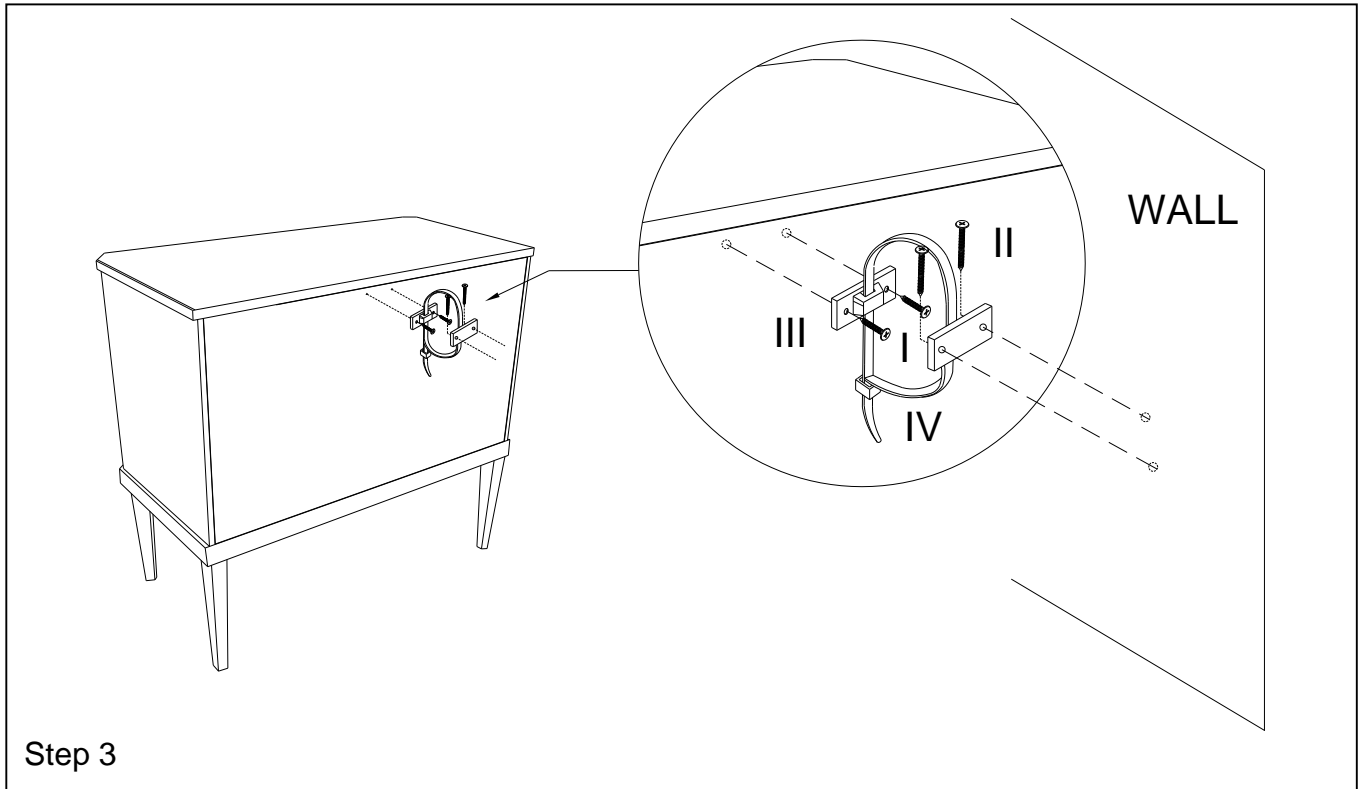

Step 3


Attach the Brackets (III) horizontally to the top of the back of the Nightstand using the Small Screws (I). Screw the remaining Brackets (III) vertically 1 inch below the brackets attached to the Nightstand using the large screws (II). The Large Screws (II) should be screwed into a stud in the wall. Align the Brackets vertically and string in the Retention Belt (IV). Confirm Strap is securely laced and locked.



## SCH-168200 GLENWOOD NIGHTSTAND - BLACK ASSEMBLY INSTRUCTION


### Option 2 – With Back Splash

Shim Flat Washer behind plywood backing

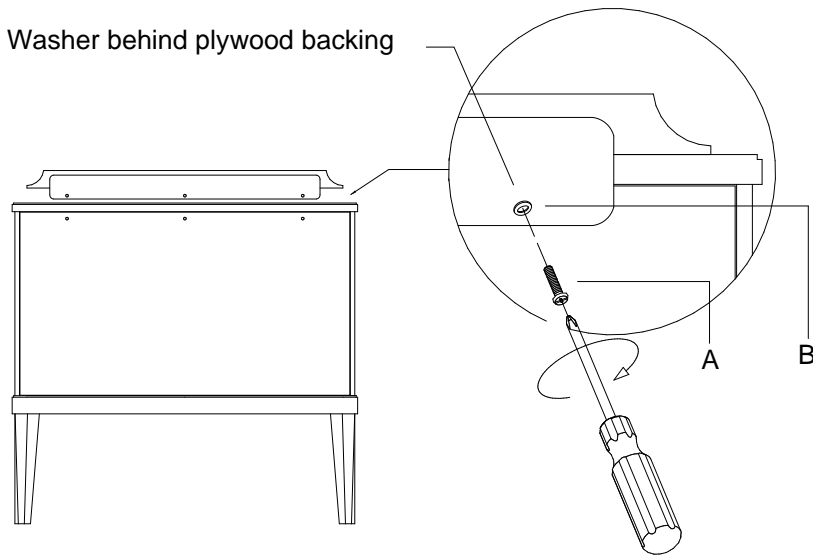

### Step 4

- Insert the bolt (A) into the female receiving slots thru the hole of the plywood backing and thru the Flat Washer Shim (B) then tighten with the Phillip screw driver.

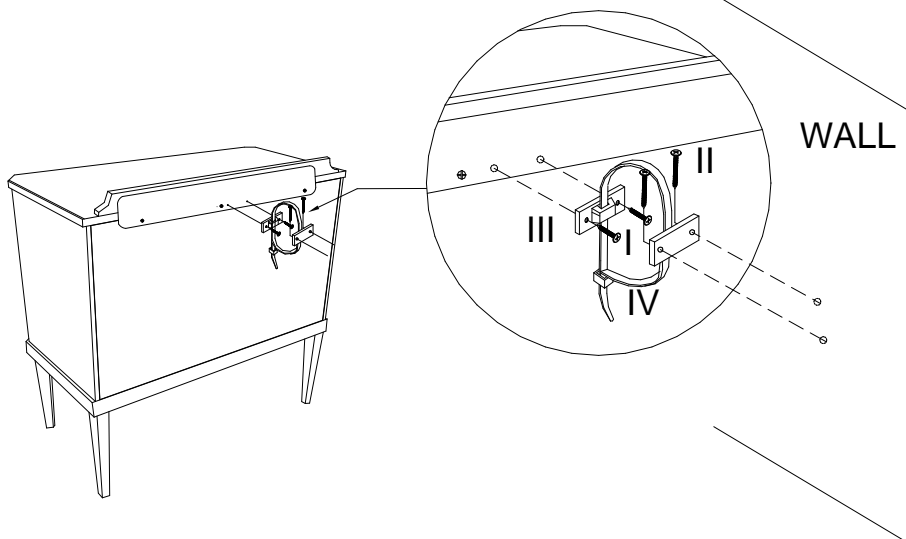

### Step 5

Attach the Brackets (III) horizontally to the top of the back of the Nightstand using the Small Screws (I). Screw the remaining Brackets (III) vertically 1 inch below the brackets attached to the Nightstand using the large screws (II). The Large Screws (II) should be screwed into a stud in the wall. Align the Brackets vertically and string in the Retention Belt (IV). Confirm Strap is securely laced and locked.