










MOLENA CABINET ASSEMBLY INSTRUCTION





Hardware Include :


No	Part	Description	Qty
A		Hexa Bolts M10 X 172 mm	4 pcs
B		Flat Washer Ø22	4 pcs
C		Spring Washer	4 pcs
D		L Spanner 14	1 pc

Parts Include :

No	Description	Image	Qty
1	Body		1 pc
2	Bunfeets		4 pcs
3	Center Bunfeet		1 pc


Antitip Kit Parts :

No	Part	Description	Qty
A		Large Screw	2 pcs
B		Small Screw	2 pcs
C		Bracket	2 pcs
D		Retention Belt	1 pc

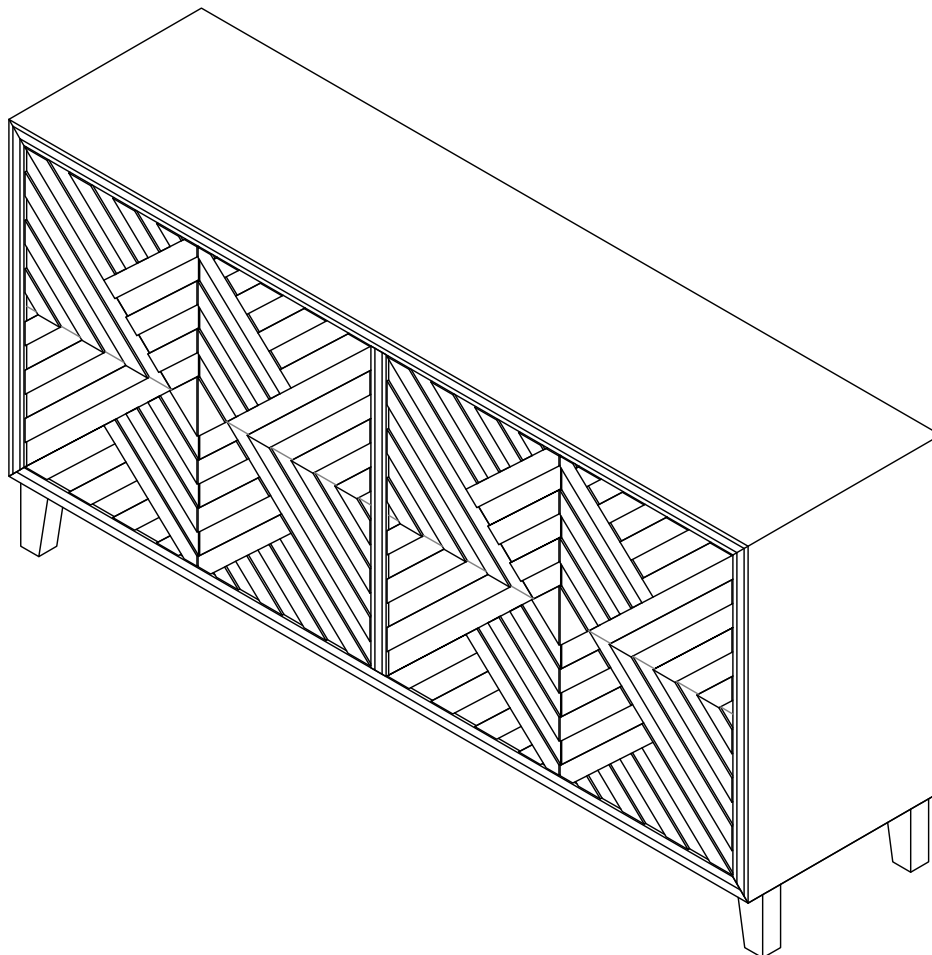




MOLENA CABINET ASSEMBLY INSTRUCTION

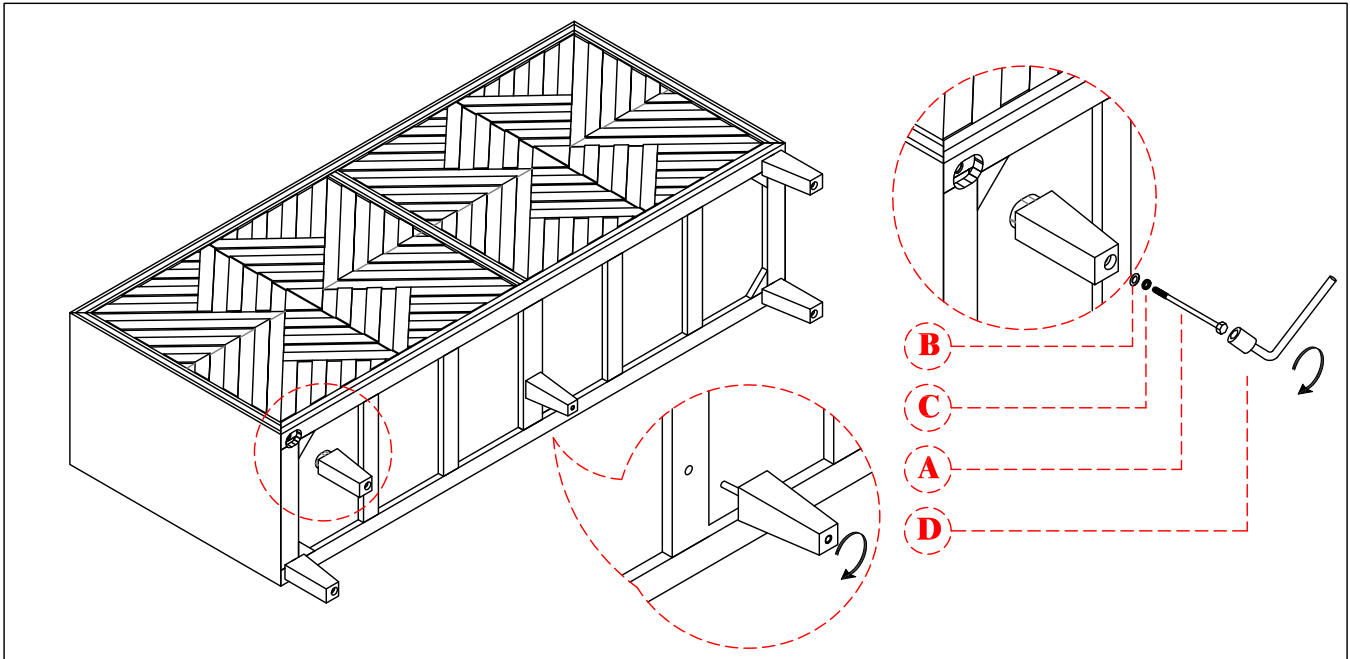

HOW TO ASSEMBLY:

- Require two persons to perform this assembly process;
- **STEP 1 :**
Required two person for assembly;
Assemble the Bunfeets with Body using the Lock Washer (C) the Flat Washer Ø22 (B) with Hexa Bolts M10 x 172 mm (A). Securely tighten with L Spanner 14 (D) as provided.
Install Center Bunfeet (3) by turning it tight.

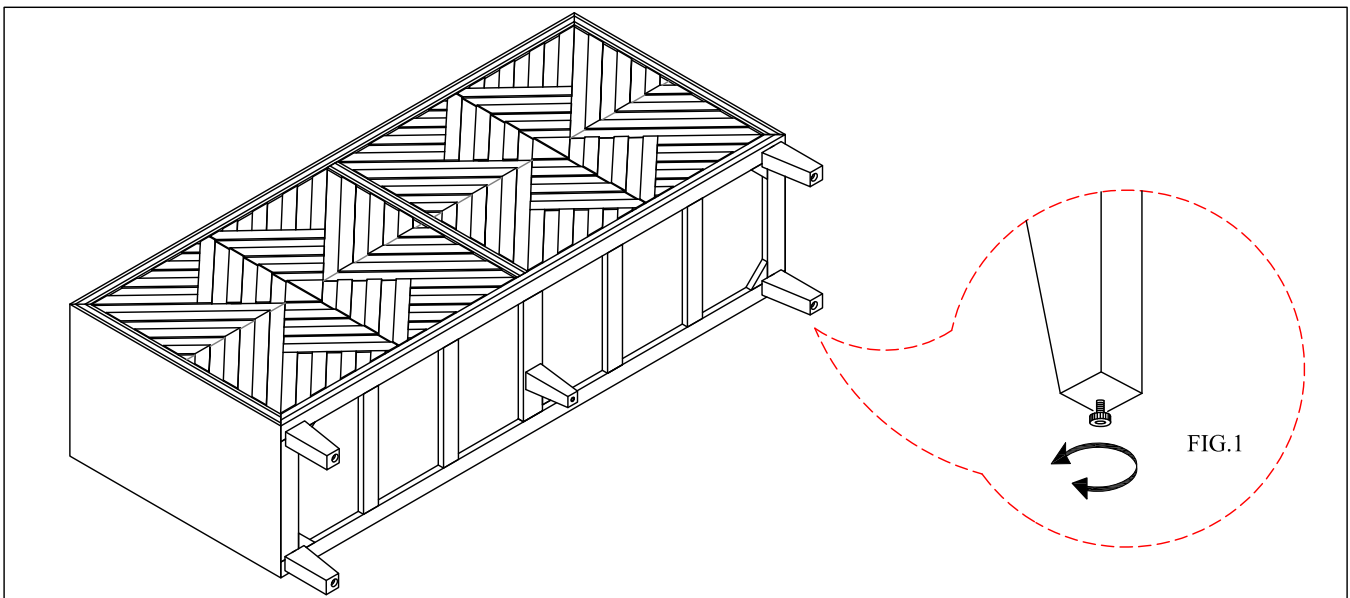


- **STEP 2 :**
If the floor uneven the levelers located at the underside of the Leg, to do this lift Up the side that need to be elevated to provide access to the levelers, turn the leveler until adequate contact with the floor as shown FIG.1



GABBY®

MOLENA CABINET ASSEMBLY INSTRUCTION

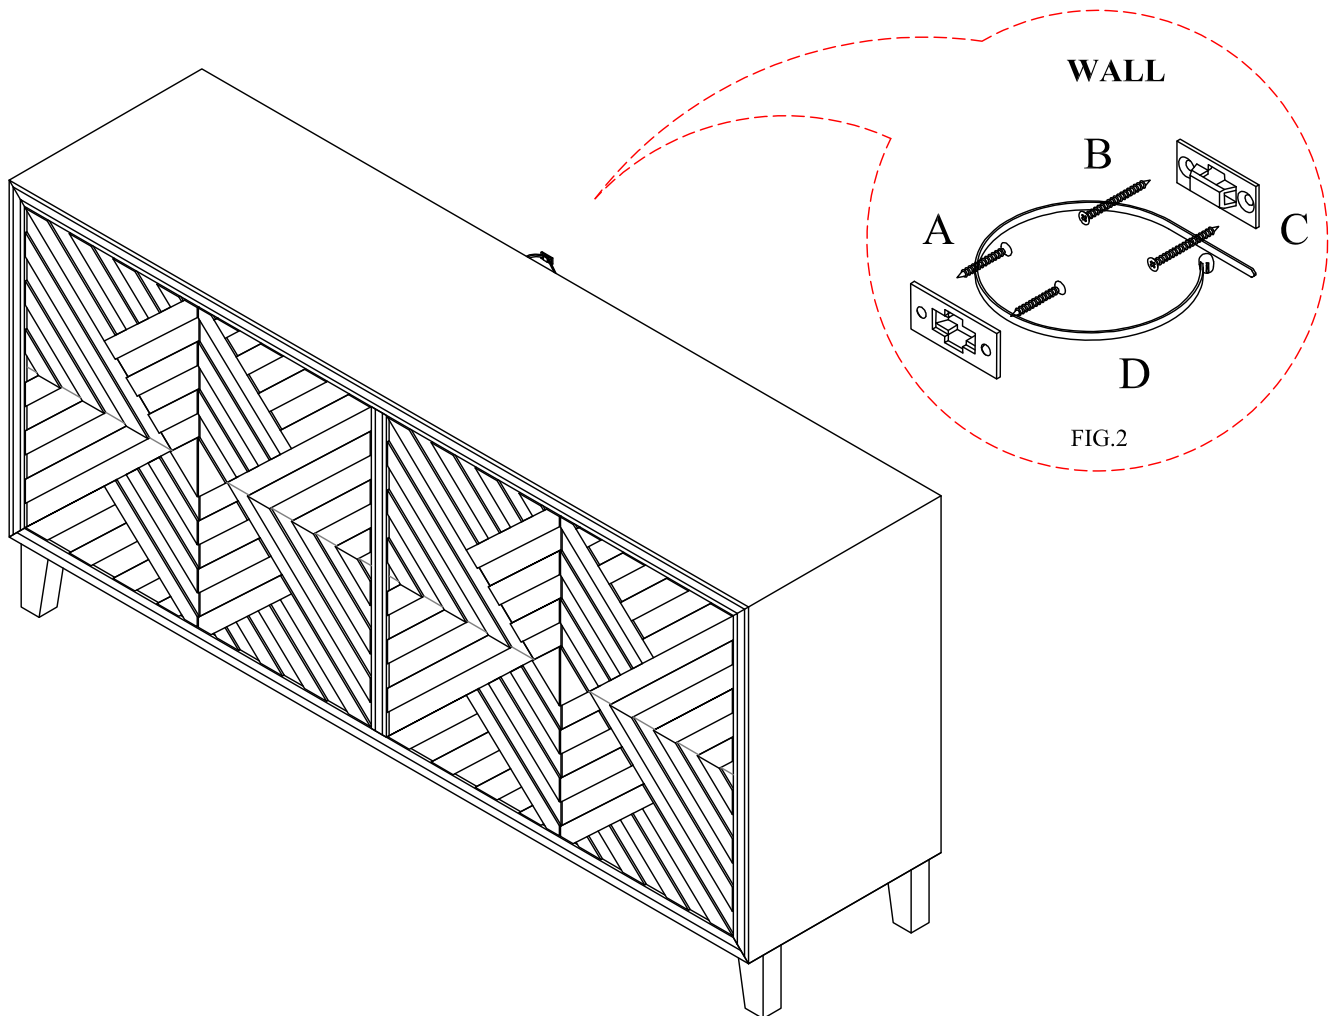

- **STEP 3 :**

Attach one of the Brackets (C) horizontally to the top of the back of the Desk using the Small Screws (A).Screw the remaining Bracket (C) vertically 1 inch below the brackets attached to the Desk using the large screws (B). The Large Screws (B) should be screwed into a stud in the wall. Align the Brackets vertically and string in the Retention Belt (D). Confirm Strap is securely laced and locked.