

# SUMMER *S* CLASSICS

## CAST ALUMINUM - PROVANCE COFFEE TABLE, END TABLE, OTTOMAN ASSEMBLY INSTRUCTIONS

### ITEMS INCLUDED IN THE HARDWARE KIT:



- 1 EIGHT (8) STAINLESS STEEL 14 MM NUTS
- 2 EIGHT (8) STAINLESS STEEL LOCK WASHERS
- 3 EIGHT (8) STAINLESS STEEL WASHERS
- 4 EIGHT (8) STAINLESS STEEL ALL-THREAD HEADLESS BOLTS WITH SLOTTED END

### PARTS INCLUDED:

- 1 FOUR (4) CAST ALUMINUM LEGS W/LEVELING FEET
- 2 ONE (1) CAST ALUMINUM TOP

### TOOLS REQUIRED:

- 1 MANUAL FLAT-HEAD SCREWDRIVER
- 2 ADJUSTABLE WRENCH OR SOCKET WRENCH WITH 14 MM SOCKET

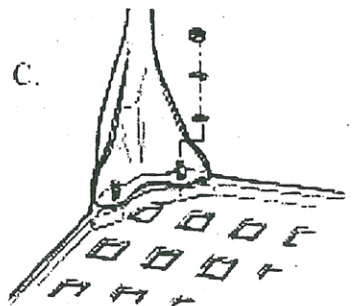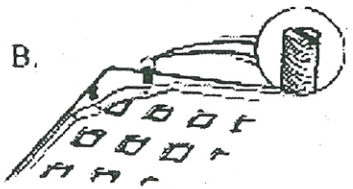

### STEP 1:

PLACE THE CAST ALUMINUM TOP (A) UPSIDE-DOWN ON A PADDED SURFACE

### STEP 2:

PLACE THE EIGHT HEADLESS BOLTS INTO THE EIGHT HOLES ON THE UNDERSIDE OF THE TOP WITH THE SLOTTED END FACING OUTWARD, AS ILLUSTRATED (B). TIGHTEN USING A FLAT-HEAD SCREWDRIVER.

### STEP 3:

PLACE ONE LEG (C) OVER TWO OF THE BOLTS, AS ILLUSTRATED. PLACE ONE WASHER, THEN ONE LOCK WASHER AND THEN ONE BOLT ON EACH BOLT. TIGHTEN. REPEAT FOR EACH LEG.

### STEP 4:

REPEAT STEP THREE UNTIL TABLE IS FULLY ASSEMBLED. STAND UPRIGHT. FOLLOW TABLE TOP INSTRUCTIONS TO ATTACH TABLE TOP. ONLY HAND TIGHTEN TABLE TOP TO BASE

### STEP 5:

TIGHTEN 14 MM BOLTS SECURING BASE WITH SOCKET WRENCH. DO NOT OVERTIGHTEN. DO NOT USE ELECTRIC DRILL.