

PROVANCE SOFA / LOVESEAT
ASSEMBLY INSTRUCTIONS

ITEMS INCLUDED IN THE HARDWARE KIT:

1. FOURTEEN (14) STAINLESS STEEL NUTS
2. FOURTEEN (14) STAINLESS STEEL LOCK WASHERS
3. FOURTEEN (14) STAINLESS STEEL WASHERS
4. FOURTEEN (14) STAINLESS STEEL HEADLESS BOLTS W/ SLOTTED END.
5. THREE (3) STAINLESS STEEL MACHINE SCREWS (FOR SOFA)
6. TWO (2) STAINLESS STEEL MACHINE SCREWS (FOR LOVESEAT)

PARTS INCLUDED:

1. TWO (2) CAST ALUMINUM CORNER LEGS WITH LEVELING FEET.
2. ONE (1) FRONT-MIDDLE CAST ALUMINUM LEG WITH LEVELING FOOT
3. ONE (1) BACK-MIDDLE CAST ALUMINUM LEG WITH LEVELING FOOT
4. ONE (1) CAST ALUMINUM SEAT PAN
5. ONE (1) CAST ALUMINUM BACK
6. TWO (2) CAST ALUMINUM ARMS

TOOLS REQUIRED:

1. FLAT-HEAD SCREWDRIVER
2. PHILLIPS SCREWDRIVER
3. SOCKET WRENCH WITH SOCKET OR ADJUSTABLE WRENCH



STEP 1:

LAY SEAT PAN ON A PADDED, NON-SCRATCH SURFACE. THE DELIVERY CARTON WORKS WELL.

STEP 2:

RAISE THE FRONT OF THE SEAT AND INSERT TWO (2) HEADLESS BOLTS IN THE TWO HOLES ON THE UNDERSIDE OF THE SEAT PAN IN THE FRONT-MIDDLE, AS ILLUSTRATED IN FIGURE 1. THE SLOTTED END OF THE BOLTS SHOULD POINT OUTWARD. TIGHTEN USING THE FLAT-HEAD SCREWDRIVER.

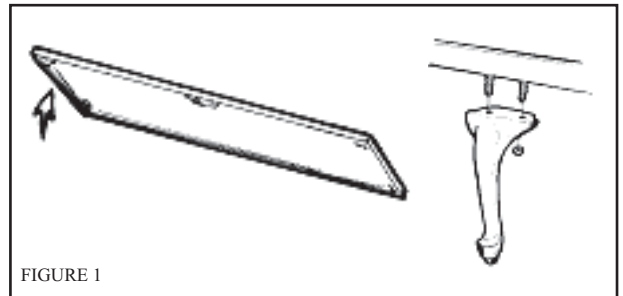


FIGURE 1

STEP 3:

PLACE THE FRONT-MIDDLE LEG OVER THE BOLTS, AS ILLUSTRATED, AND INSERT ONE WASHER, THEN ONE LOCK WASHER, THEN ONE NUT OVER EACH BOLT. HAND-TIGHTEN ONLY.

STEP 4:

RAISE THE SEAT PAN IN THE BACK AND INSERT SIX (6) HEADLESS BOLTS INTO THE SIX HOLES ON THE BACK OF THE SEAT PAN WITH SLOTTED END FACING OUTWARD. TIGHTEN.

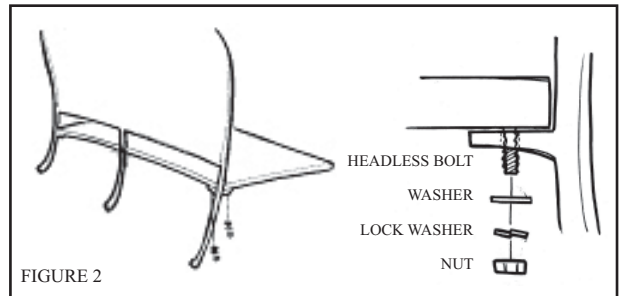


FIGURE 2

STEP 5:

TWO PEOPLE REQUIRED. RAISE THE BACK TO A VERTICAL POSITION AND PLACE THE FOUR CORNER BOLTS OVER THE HOLES IN THE BACK, AS ILLUSTRATED IN FIGURE 2. INSERT WASHERS, THEN LOCK WASHERS, THEN NUTS. HAND-TIGHTEN ONLY

STEP 6:

INSERT THE BACK-MIDDLE LEG OVER THE BACK-MIDDLE BOLTS, AND INSERT ONE WASHER, THEN ONE LOCK WASHER, THEN ONE NUT OVER EACH BOLT. HAND TIGHTEN ONLY.

STEP 7:

INSERT A THREADED BOLT INTO EACH ARM, AS ILLUSTRATED IN FIGURE 3. TIGHTEN. INSERT THE BOLT INTO THE HOLE ON ONE SIDE OF THE SEAT, BUT DO NOT ATTACH HARDWARE. ROTATE THE ARM UNTIL THE BACK OF THE ARM FITS INTO THE BACK, AS ILLUSTRATED IN FIGURE 3. SECURE THE ARM TO THE BACK BY INSERTING A MACHINE SCREW THROUGH THE HOLE IN THE BACK. DO NOT TIGHTEN. THEN SECURE THE FRONT OF THE ARM BY ATTACHING A WASHER, LOCK WASHER AND NUT TO THE BOLT UNDER THE SEAT PAN. REPEAT FOR OTHER ARM. HAND-TIGHTEN ONLY.

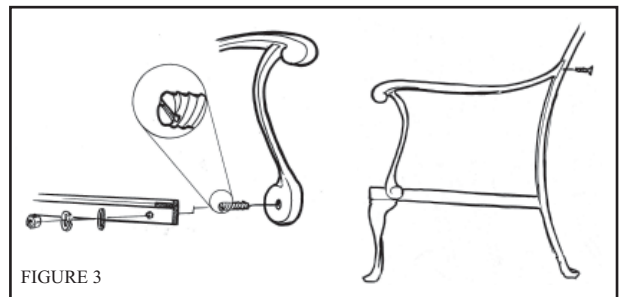


FIGURE 3

STEP 8: (FOR SOFA ASSEMBLY ONLY)

INSERT ONE MACHINE SCREW THROUGH THE HOLE IN BOTTOM -MIDDLE OF THE BACK AND INTO THE HOLE IN THE SEAT PAN.

STEP 9:

TIGHTEN ALL MACHINE SCREWS INSERTED IN THE BACK FIRST. THEN TIGHTEN THE HARDWARE SECURING THE FRONT OF BOTH ARMS

STEP 10:

INSERT FOUR (4) HEADLESS BOLTS UNDERNEATH THE FRONT CORNERS OF THE SEAT PAN WITH THE SLOTTED END FACING OUTWARD. INSTALL FRONT CORNER LEGS AND INSERT ONE WASHER, THEN ONE LOCK WASHER, THEN ONE NUT OVER EACH BOLTS. SEE FIGURE 4.

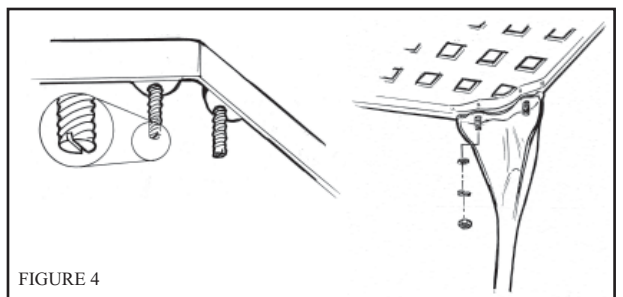


FIGURE 4

STEP 11:

TIGHTEN ALL HARDWARE SECURING LEGS