


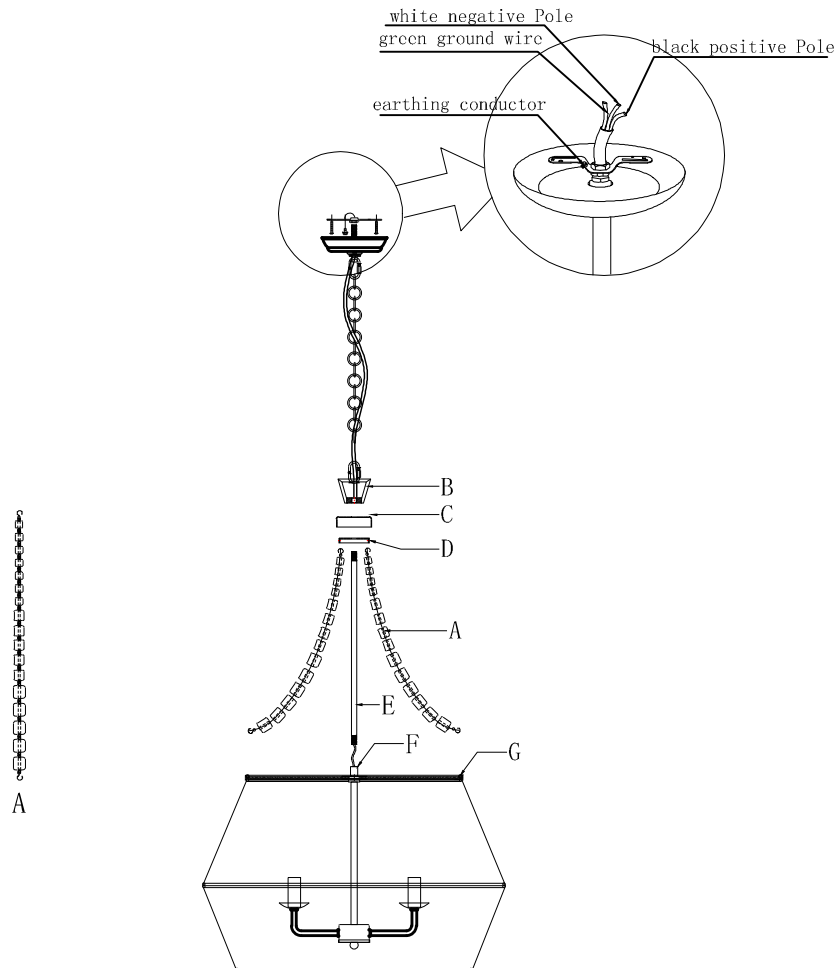

ASSEMBLY INSTRUCTIONS

Soma Pendant
SCH-166020

- (1) Screw (E) centre pole to (F) chandelier base.
- (2) Unscrew (B) hoop to raise (C) cover.
- (3) Attach (A) 7 strands wood beads to (D) top ring and (G) bottom ring.
- (4) Put down (C) cover over (D) top ring.
- (5) Screw (B) hoop through (E) centre pole on top of (C) cover tightly.
- (6) Thread wire through chain every 3 links.



ASSEMBLY INSTRUCTIONS

Soma Pendant
SCH-166020

- (1) Screw (E) centre pole to (F) chandelier base.
- (2) Unscrew (B) hoop to raise (C) cover.
- (3) Attach (A) 7 strands wood beads to (D) top ring and (G) bottom ring.
- (4) Put down (C) cover over (D) top ring.
- (5) Screw (B) hoop through (E) centre pole on top of (C) cover tightly.
- (6) Thread wire through chain every 3 links.

