



# ASSEMBLY INSTRUCTIONS Sonny Pendant


SCH-166015

- (1) Screw (E) centre pole to (F)chandelier base.
- (2) Unscrew (B) hoop to raise (C) cover.
- (3) Attach (A) 14 strands wood beads to (D) top ring and (G) bottom ring.
- (4) Put down (C) cover over (D) top ring.
- (5) Screw (B) hoop through (E) centre pole on top of (C) cover tightly.
- (6) Thread wire through chain every 3 links.

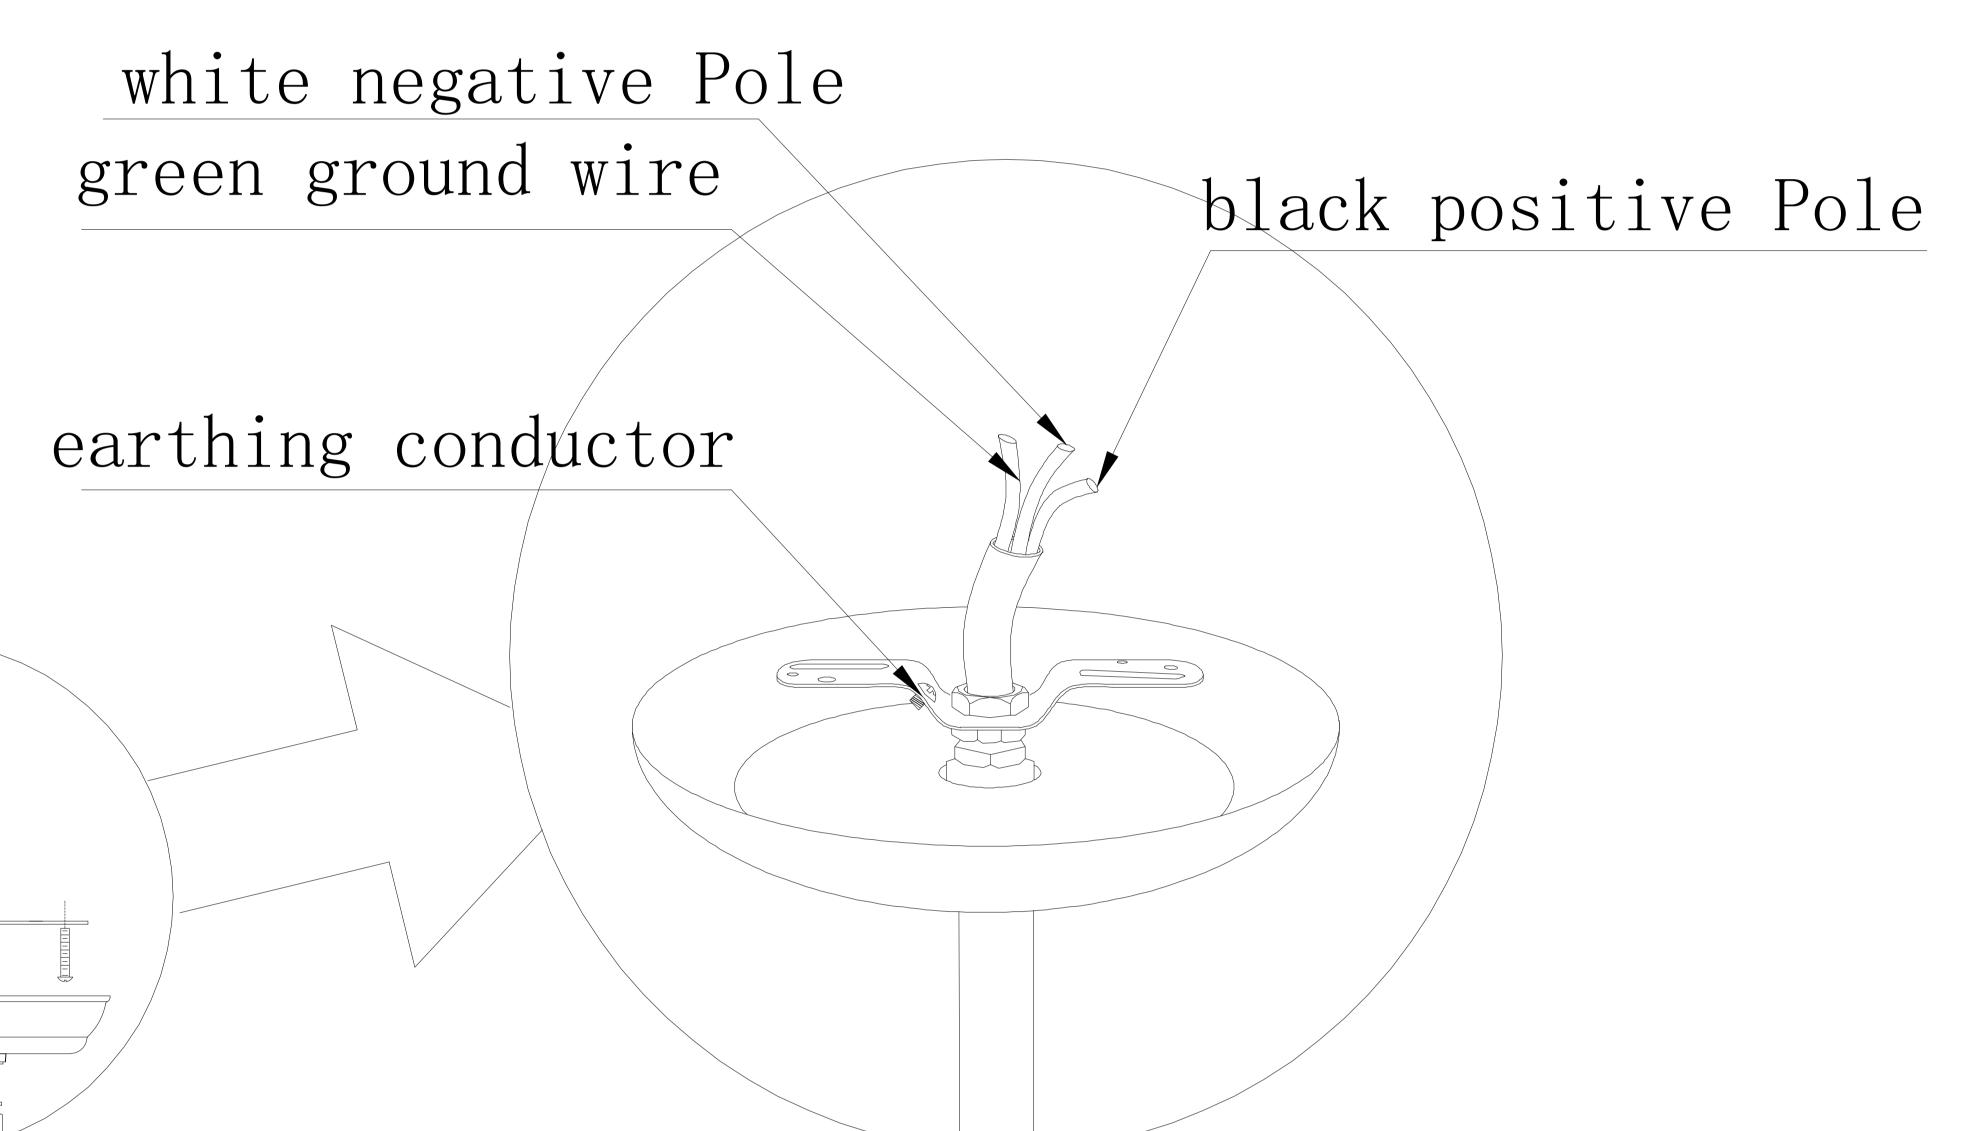



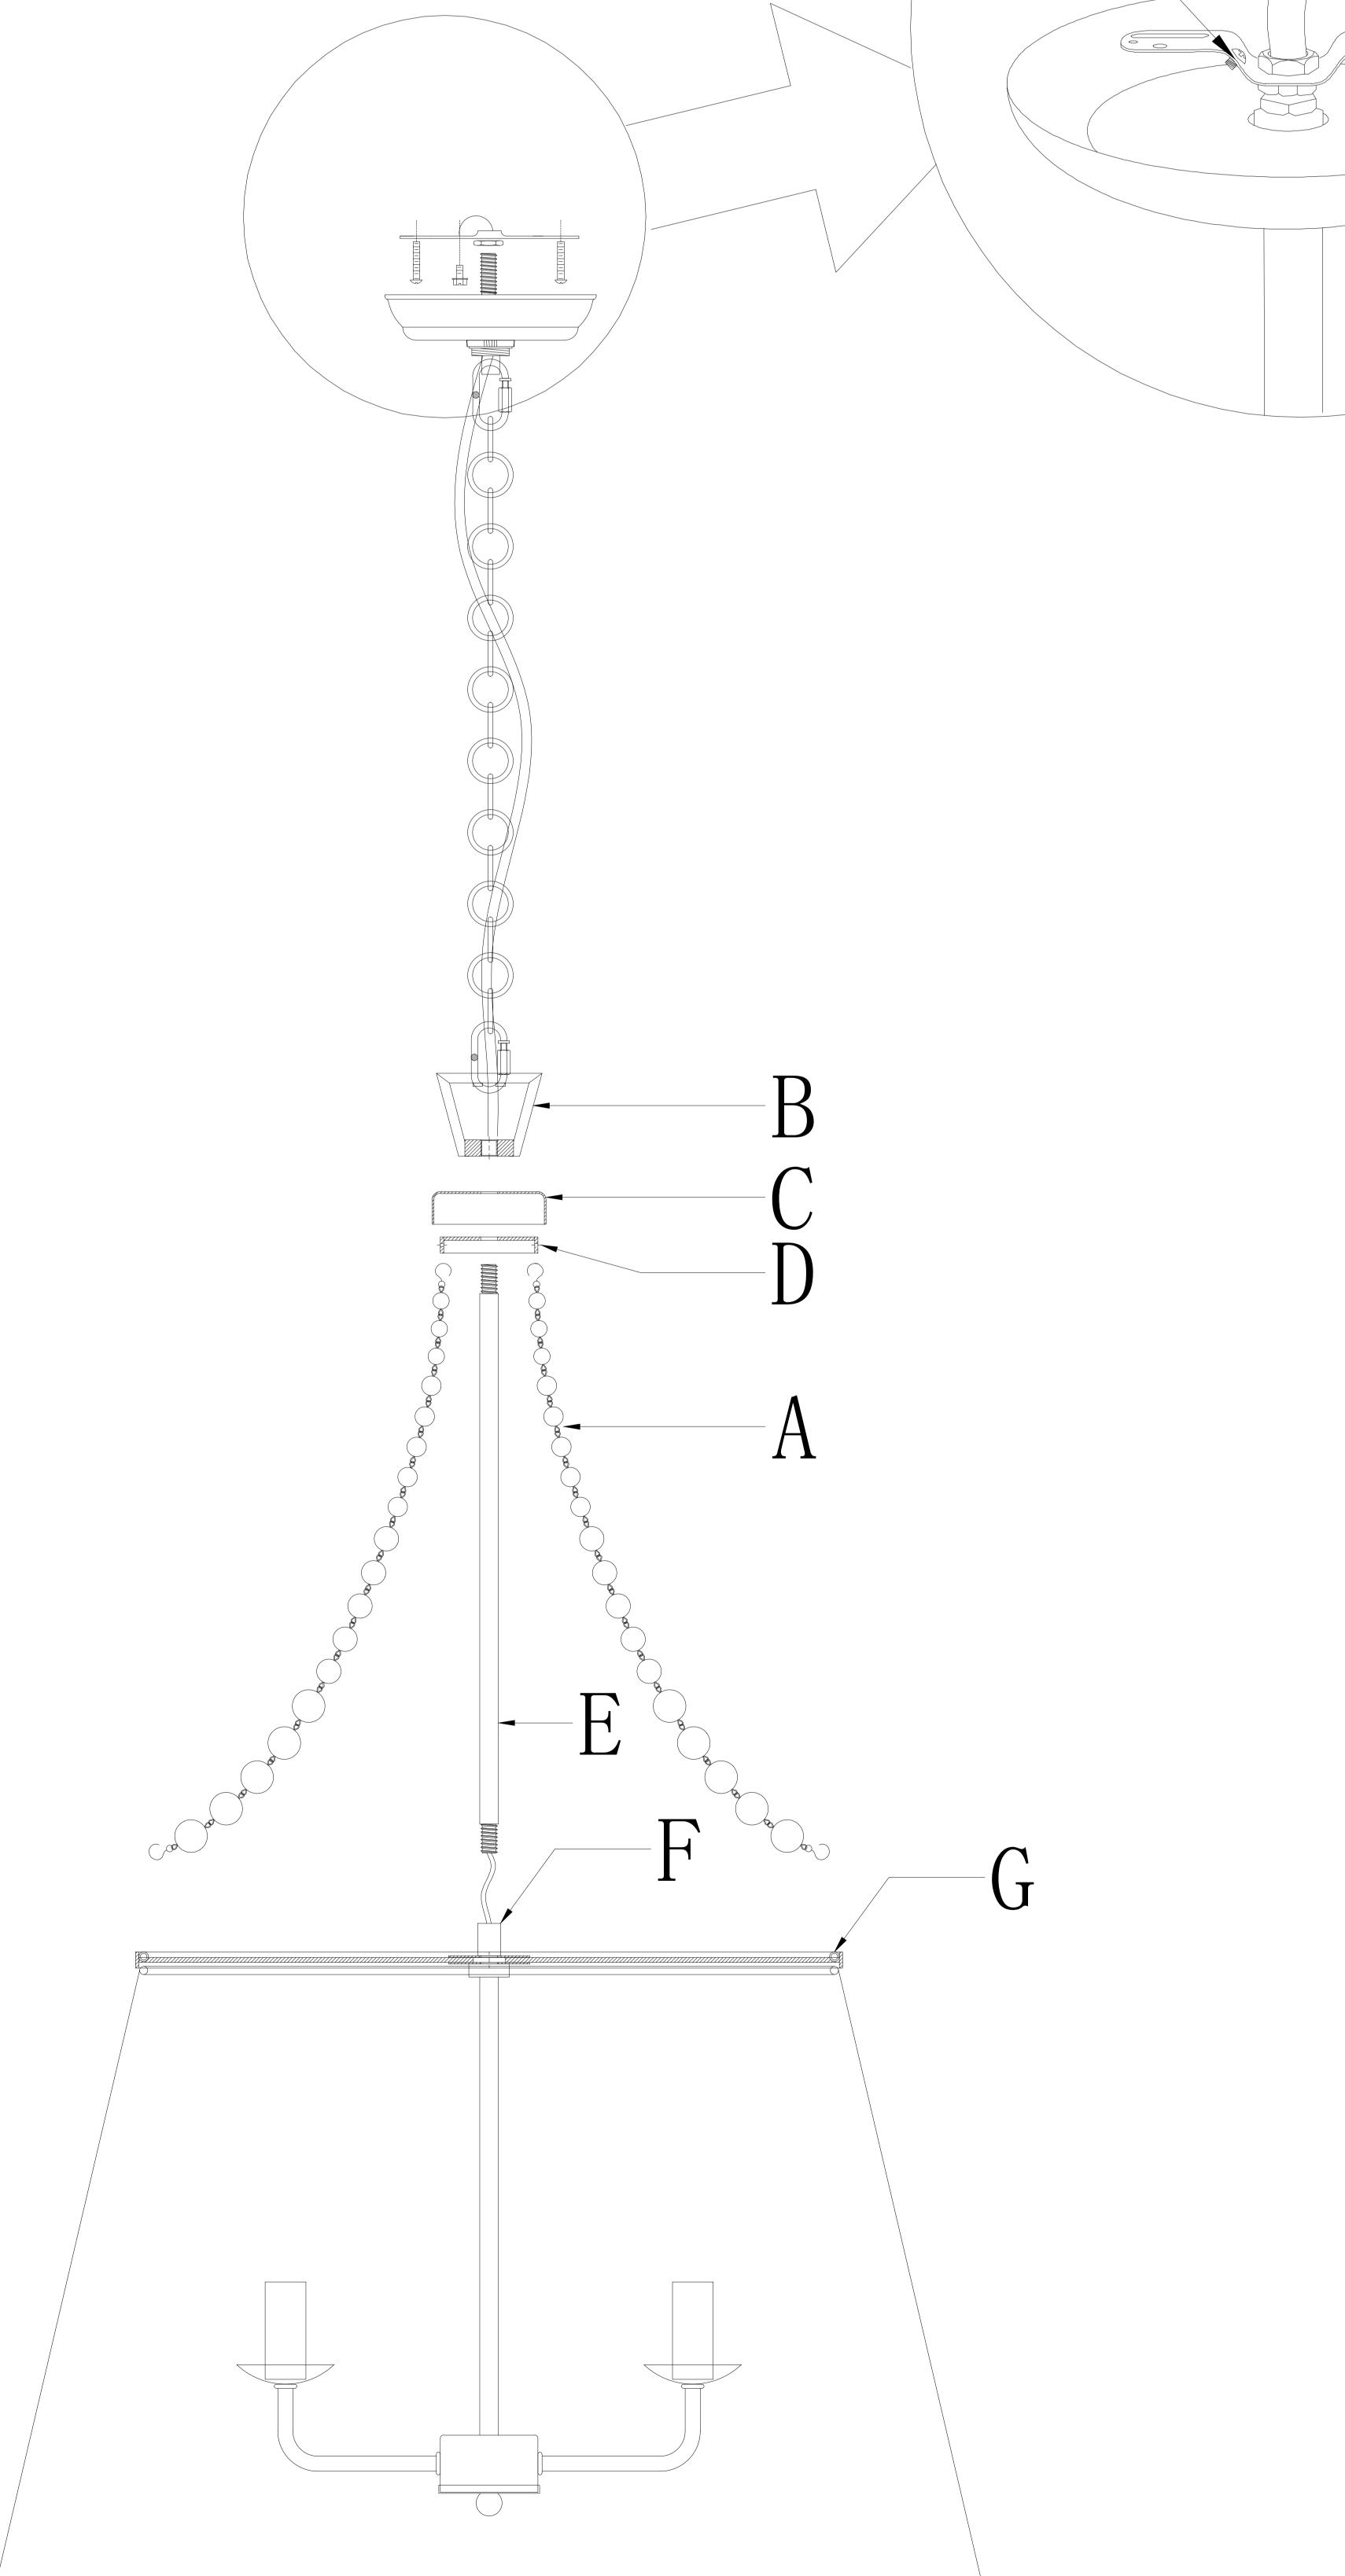





# ASSEMBLY INSTRUCTIONS Sonny Pendant

SCH-166015

- (1) Screw (E) centre pole to (F)chandelier base.
- (2) Unscrew (B) hoop to raise (C) cover.
- (3) Attach (A) 14 strands wood beads to (D) top ring and (G) bottom ring.
- (4) Put down (C) cover over (D) top ring.
- (5) Screw (B) hoop through (E) centre pole on top of (C) cover tightly.
- (6) Thread wire through chain every 3 links.

